



Figure 9. Standard Mounting Positions for R.S.V.P. Type 1031 Actuator

Ordering Information

For assistance in sizing, selection, pricing, and order placement- contact your R.S.V.P. sales office or sales representative with complete service conditions.

Installation

The standard actuator can be installed in any orientation. For installation orientation of actuators supplied with the hydraulic manual override, contact your R.S.V.P. sales office or sales representative. Standard mounting positions are shown in figure 9.

Important

Due to RSVP Actuators continuing commitment to engineered product advancement, data presented herein is subject to change.

Note

All RSVP Actuators are fully assembled and tested in our plant located in Hempstead, Texas.